




# Wireless Bed Mat

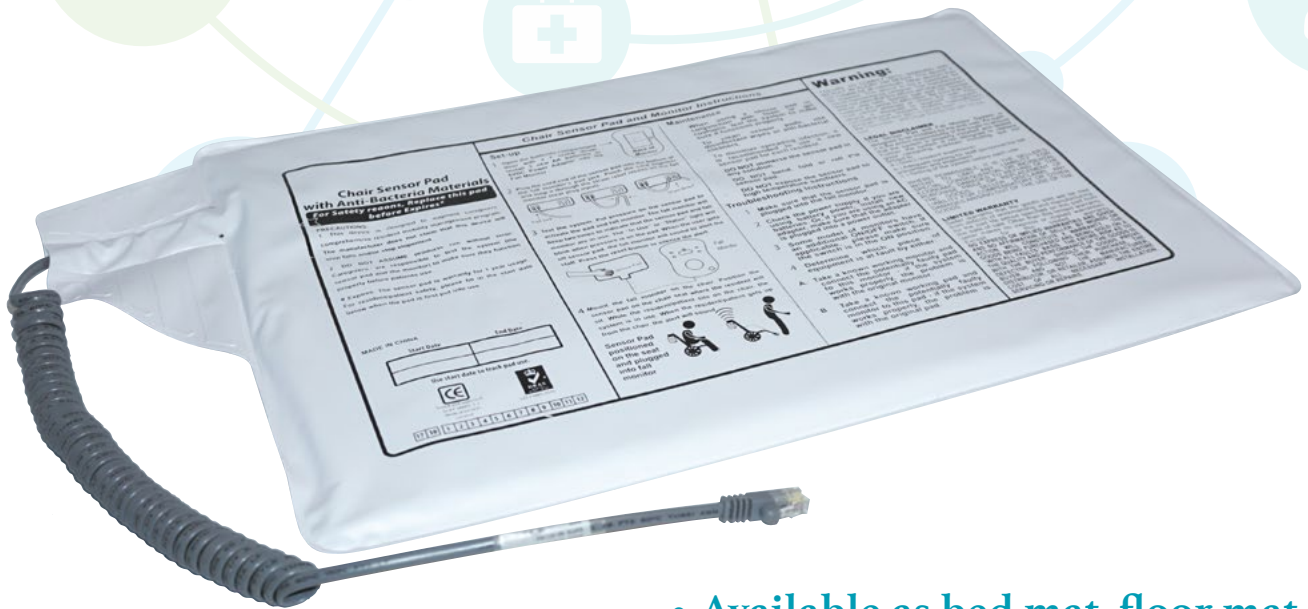

- Available in hard wired or wireless configuration.
- Plug and play operation.
- Available with stereo or RJ45 connector.
- Available as bed mat, floor mat and chair mat.
- Easy to clean with solvent wipe or disinfectant.
- Assists in reducing the risk of falls and injuries.

## General description

The wireless bed mat sensor transmits an RF signal to the wireless receiver once a resident/patient moves out of bed. With no cables going from the bed mat

to the call point, it gives the flexibility of moving the bed around the room without the need to unplug cables.

### Specifications:

- Wireless Frequency: 433.92MHz Transmits up to 30m (line of sight).
- Hardwired Stereo or RJ plug type.

### Accessories:

- Suitable for all NesseCom call points.

### Part numbers:

- Please contact NesseCom sales to identify the best solution for your site